

SG 350 ex, SG 5100 ex, SG 5200, SG 10-2, SG 10-2A:

Error	Reason	Solution
Coldstrt	Data could not be read.	Send device in for inspection.
ВАТ КАР	Current battery capacity is only or less than 70 % of the nominal capacity.	Allow device to run completely empty and recharge; if error occurs again, device must be sent in for inspection
Maintenance required!	Maintenance interval exceeded.	Message can be paused by pressing the OK menu button. Send device to manufacturer for maintenance.
Low Bat	Battery voltage is too low. Device continues to run until battery voltage drops to minimum value.	Recharge battery.
Bat leer	Akkuspannung ist auf Minimalwert abgesunken. Gerät schaltet sich ab. Messung wird abgebrochen.	Recharge battery.
Low Flow/Last?	Set volume flow cannot be maintained: battery empty, Flow resistance or selected volume flow too high, suction nozzle blocked, pump blocked.	Recharge battery. Reduce flow resistance or volume flow. Clean the intake nozzle with compressed air from the inside to the outside. Make sure that no foreign objects get into the appliance. If the error persists, the appliance must be sent in for inspection.
NOT CAL!	<u>Only SG 350 ex:</u> Device not yet calibrated. RESETall was performed.	Device must be recalibrated. If the error occurs again, the device must be sent to the manufacturer for checking.